

 
# BLACK DIAMOND WALL WASH

## DESCRIPTION


The Black Diamond Wall Wash is available without a lamp or with a G4 Rectangular Wafer and is ready to install right out of the box with a frosted glass lens. There are three glass lenses from which to choose for the desired effect. The frosted and glass lenses offer a 98° horizontal beam spread and the prism lens expands the horizontal beam spread to 114°. The spun brass construction features a baked enamel finish in black (BK) or bronze (BZ). The Black Diamond Wall Wash features an adjustment system which allows for 18 points of articulation of the knuckle.

## BLACK DIAMOND WALL WASH

Use	<b>Uplighting, Grazing, and Backlighting Techniques. Best for Low Level Wall Wash</b>	
Finish	<b>Black or Bronze</b>	
Includes	<b>Frosted Glass Lens, Clear Glass Lens, Prism Glass Lens, and ABS Mounting Stake</b>	
Warranty	<b>10 Year Warranty on Black Diamond Fixtures</b>	
Order With Lamp	<b>G4 Rect. Wafer, 3W, 2700K</b>	BD-WW-G4-WAFER BD-WW-G4-WAFER-BZ
	<b>G4 Rect. Wafer, 3W, 3000K</b>	BD-WW-G4-WAFER-BK-3000 BD-WW-G4-WAFER-BZ-3000
Order Without Lamp	<b>Fits G4 Bi-Pin</b>	BD-WW-G4-WAFER-NL BD-WW-G4-WAFER-BZ-NL

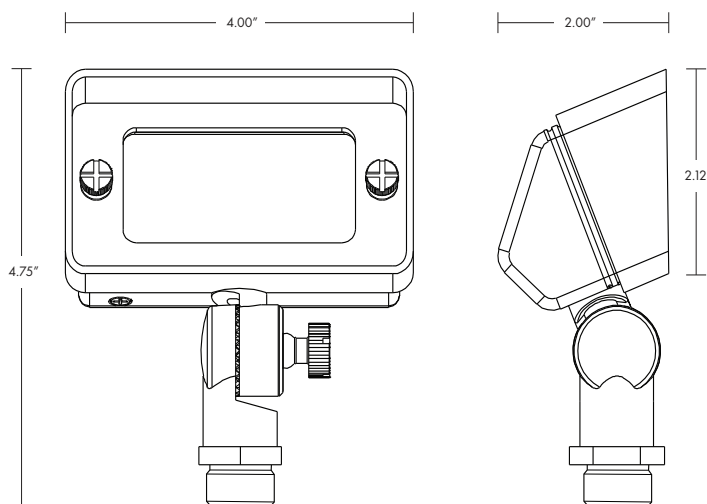

Black Brass  
Baked Enamel (BK)

 

Bronze Baked  
Enamel (BZ)



**BD-WW-G4-WAFER**

**SOFT SOIL APPLICATIONS: INSTALLING THE GROUND STAKE & FIXTURE**

1. Connect the power cable from the fixture body to the landscape cable.
2. Lay the power cable into the slotted relief on the stake.
3. Press the fixture and stake into the ground.
4. Use a level to ensure the top of the stake is level with the ground.

**HARD SOIL APPLICATIONS: INSTALLING THE GROUND STAKE & FIXTURE**

1. Unscrew the fixture body from the stake.
2. Dig a hole approximately 4" wide by 10" deep and gently tap the stake into the ground with a rubber mallet.
3. Use a level to ensure the top of the stake is level with the ground.
4. Reinstall the fixture body onto the stake and lay the power cable into the slotted relief on the stake.
5. Connect the power cable from the fixture body to the landscape cable.

**ADJUSTING THE FIXTURE**

1. Turn the thumbnut counter-clockwise to loosen the knuckle.
2. Rotate the fixture vertically to the preferred position.
3. Turn the thumbnut clockwise to hold it in the preferred position. Adjusting the fixture allows for dark sky ordinance applications.

**CHANGING OUT LENSES**

1. Use a screwdriver to remove the two screws and then remove the lens cover.
2. Remove the lens from the gasket and place the new lens in the gasket.
3. Reattach the two screws to the lens cover and tighten.